


Pointer Position	OUTLETS - DIAL OPERATION								
	1	2	3	5	6	8	9		
O/A Diaph	W/Val	Supply	Htr	De-Ice	A/C	De-Fog			
1 Off	VAC	VAC	VENT	VENT	VAC	VAC	VAC		
2 A/C air	VAC	VAC	VENT	VENT	VAC	VAC	VAC		
3 A/C O/S	VENT	VENT	VAC	VENT	VAC	VAC	VAC		
4 Bi-level	VENT	VENT	VAC	VENT	VENT	VAC	VAC		
5 Vent	VENT	VENT	VAC	VENT	VENT	VAC	VAC		
6 Htr	VENT	VENT	VAC	VENT	VENT	VAC	VAC		
7 De-Fog	VENT	VENT	VAC	VENT	VENT	VENT	VENT		
8 De-Ice	VENT	VENT	VAC	VAC	VAC	VENT	VENT		

I. A. = Inside air  
O. A. = Outside air

TO VAC SUPPLY SOURCE

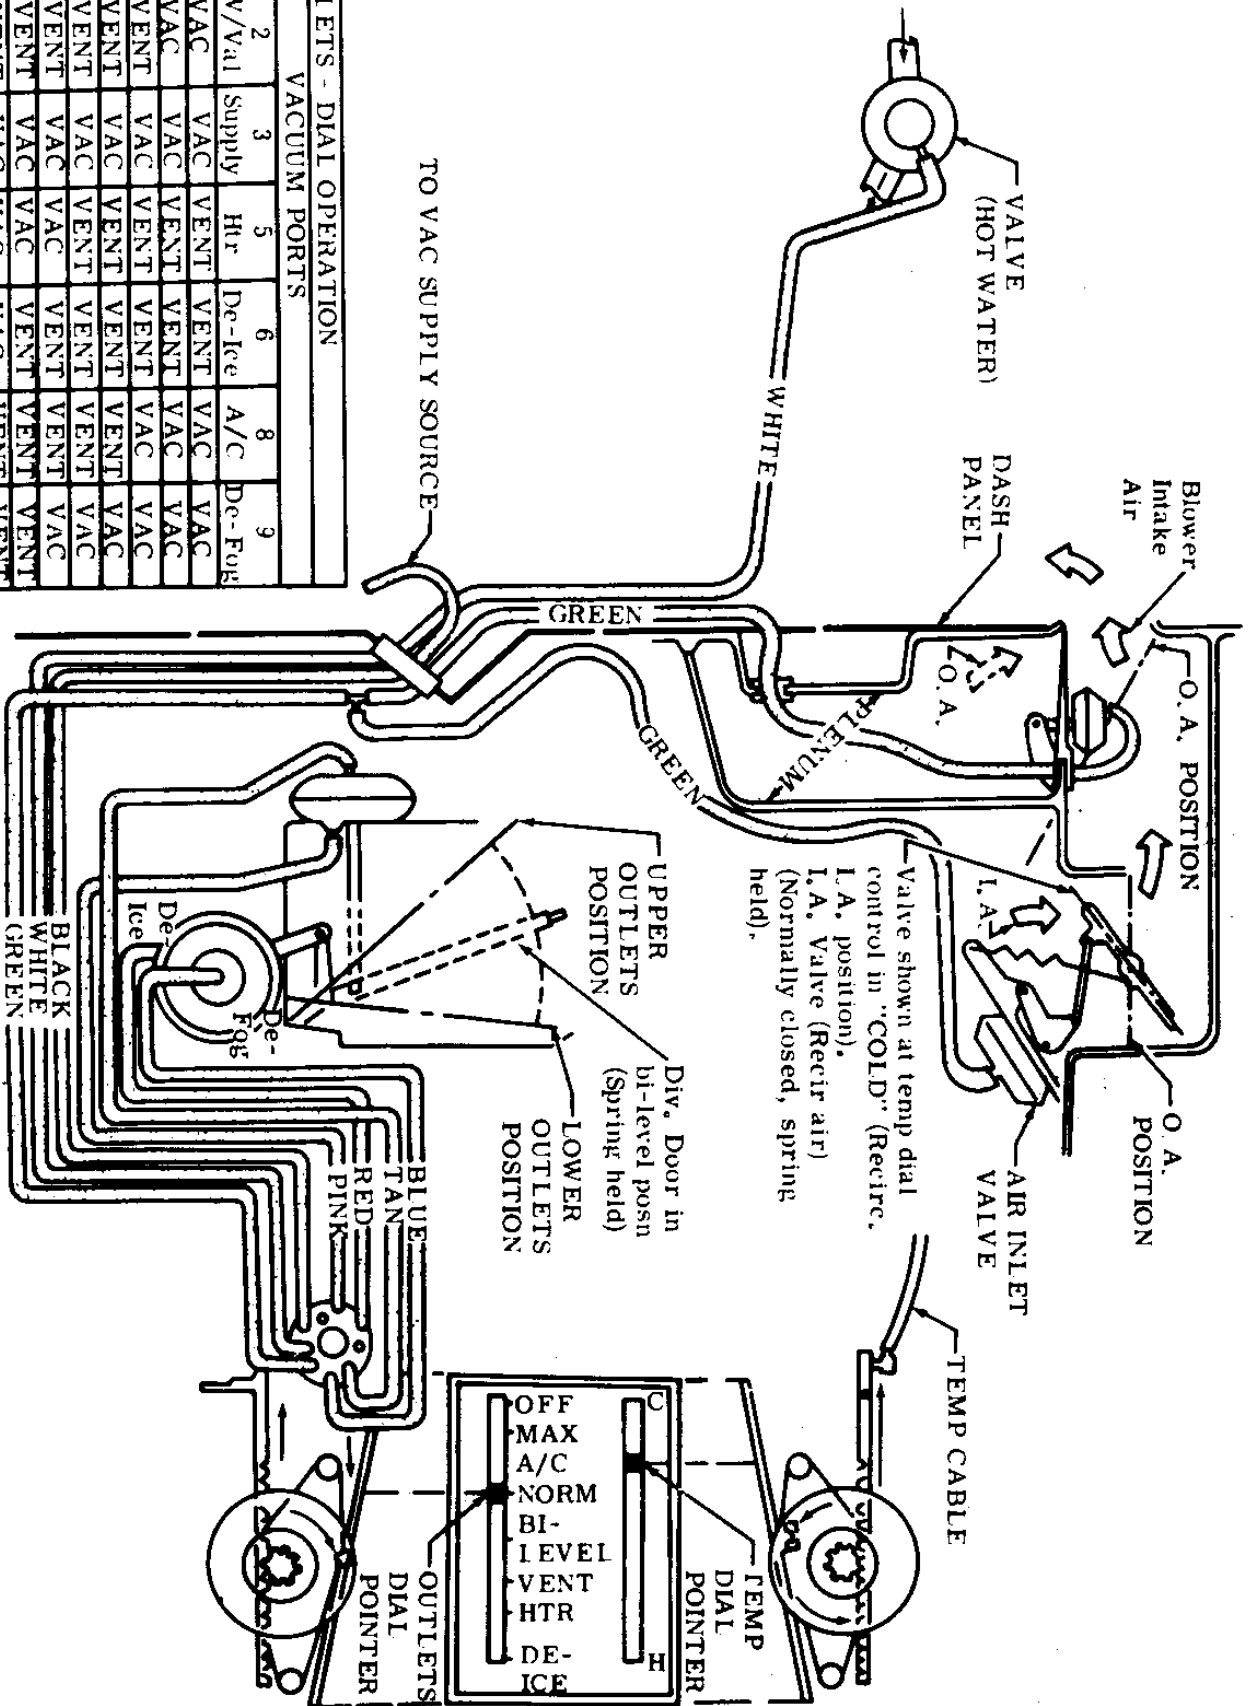

# 1970-72 Corvette A/C Heater Vacuum Diagram