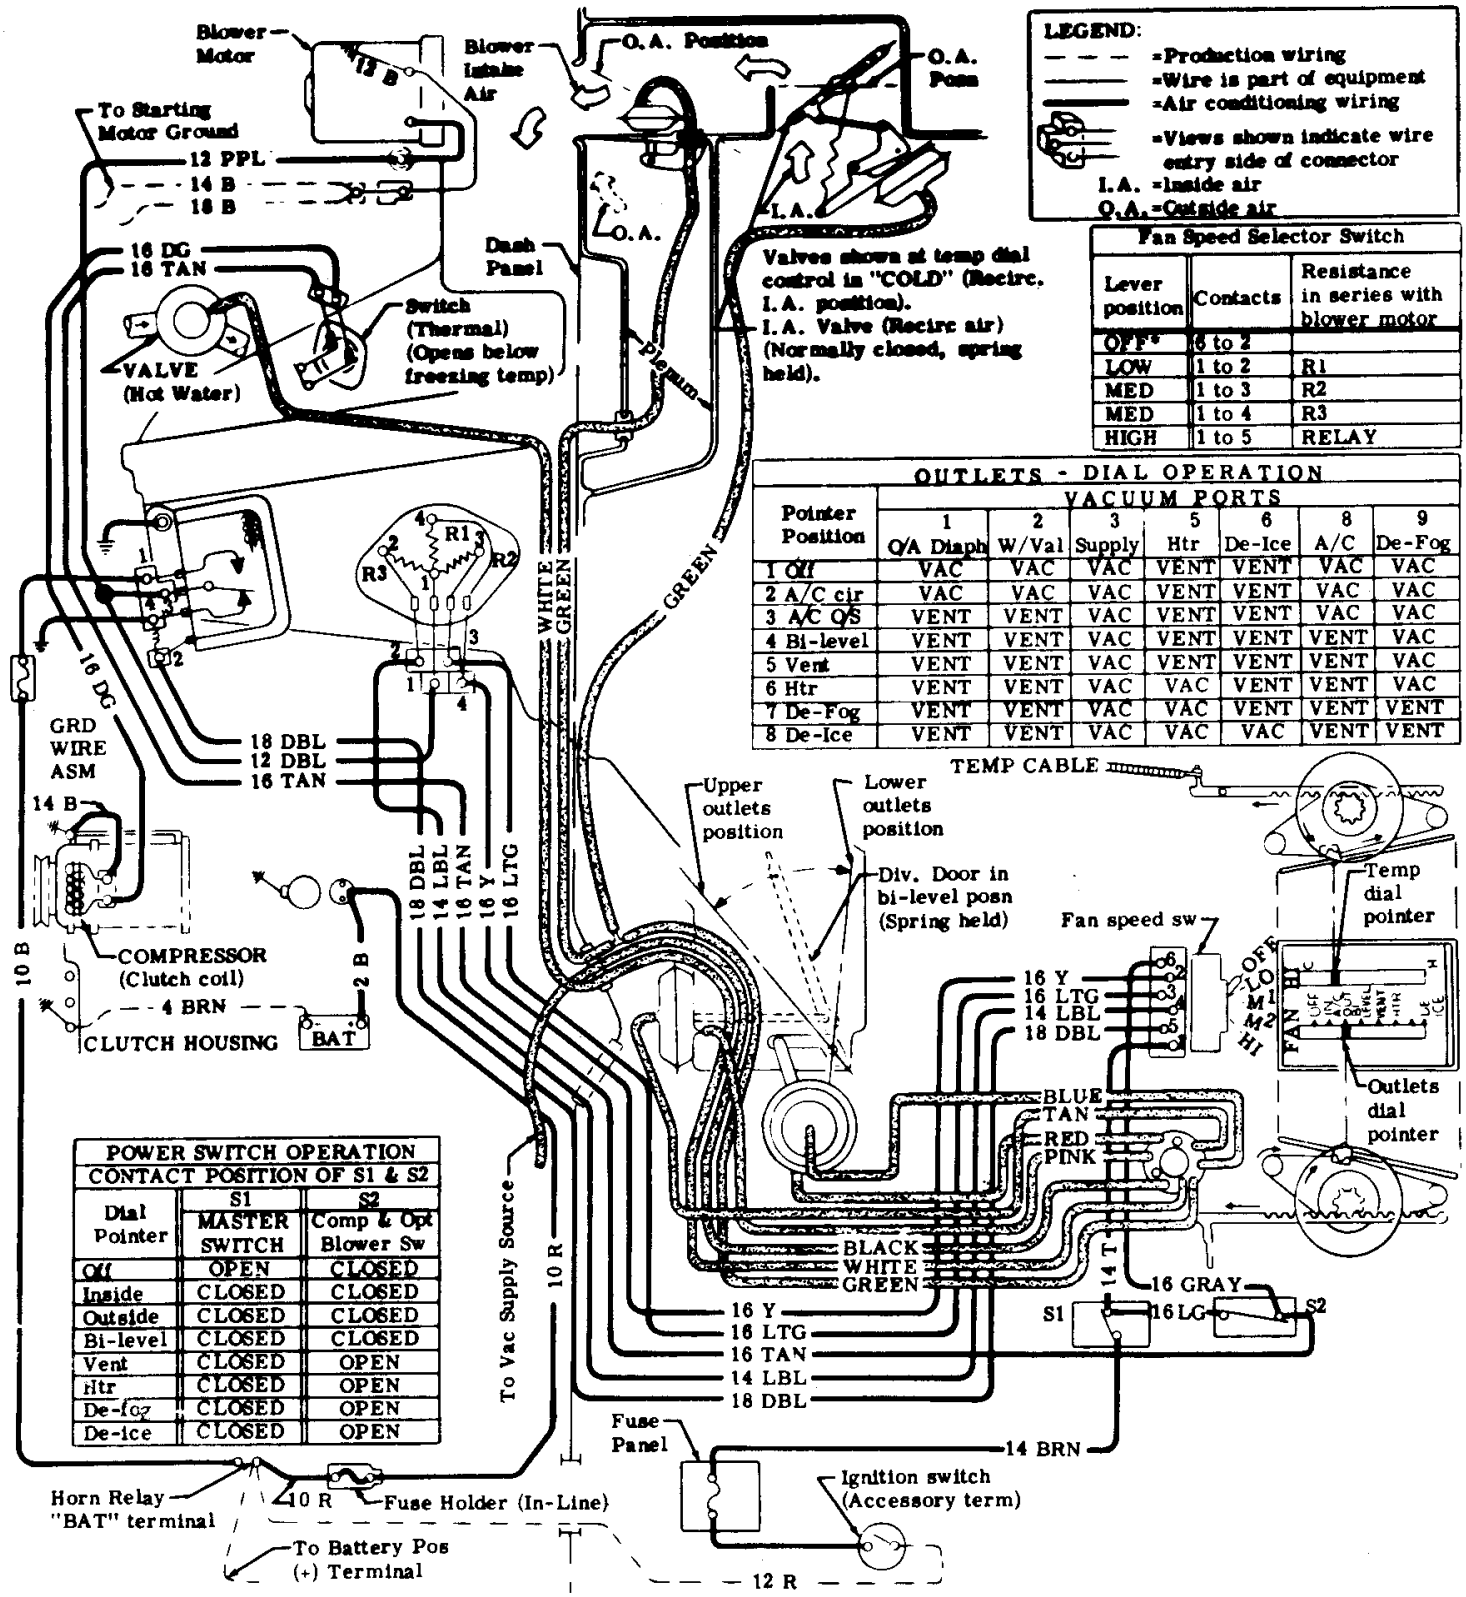

Fan Speed Selector Switch		
Lever position	Contacts	Resistance in series with blower motor
OFF*	6 to 2	
LOW	1 to 2	R1
MED	1 to 3	R2
MED	1 to 4	R3
HIGH	1 to 5	RELAY

OUTLETS - DIAL OPERATION							
Pointer Position	VACUUM PORTS						
	1 O/A Diaph	2 W/Val	3 Supply	5 Htr	6 De-Ice	8 A/C	9 De-Fog
1 Off	VAC	VAC	VAC	VENT	VENT	VAC	VAC
2 A/C cir	VAC	VAC	VAC	VENT	VENT	VAC	VAC
3 A/C O/S	VENT	VENT	VAC	VENT	VENT	VAC	VAC
4 Bi-level	VENT	VENT	VAC	VENT	VENT	VENT	VAC
5 Vent	VENT	VENT	VAC	VENT	VENT	VENT	VAC
6 Htr	VENT	VENT	VAC	VAC	VENT	VENT	VAC
7 De-Fog	VENT	VENT	VAC	VAC	VENT	VENT	VENT
8 De-Ice	VENT	VENT	VAC	VAC	VAC	VENT	VENT

POWER SWITCH OPERATION		
CONTACT POSITION OF S1 & S2		
Dial Pointer	S1 MASTER SWITCH	S2 Comp & Opt Blower Sw
Off	OPEN	CLOSED
Inside	CLOSED	CLOSED
Outside	CLOSED	CLOSED
Bi-level	CLOSED	CLOSED
Vent	CLOSED	OPEN
Htr	CLOSED	OPEN
De-fog	CLOSED	OPEN
De-ice	CLOSED	OPEN

1969 Corvette
A/C Heater Wiring & Vacuum Diagram