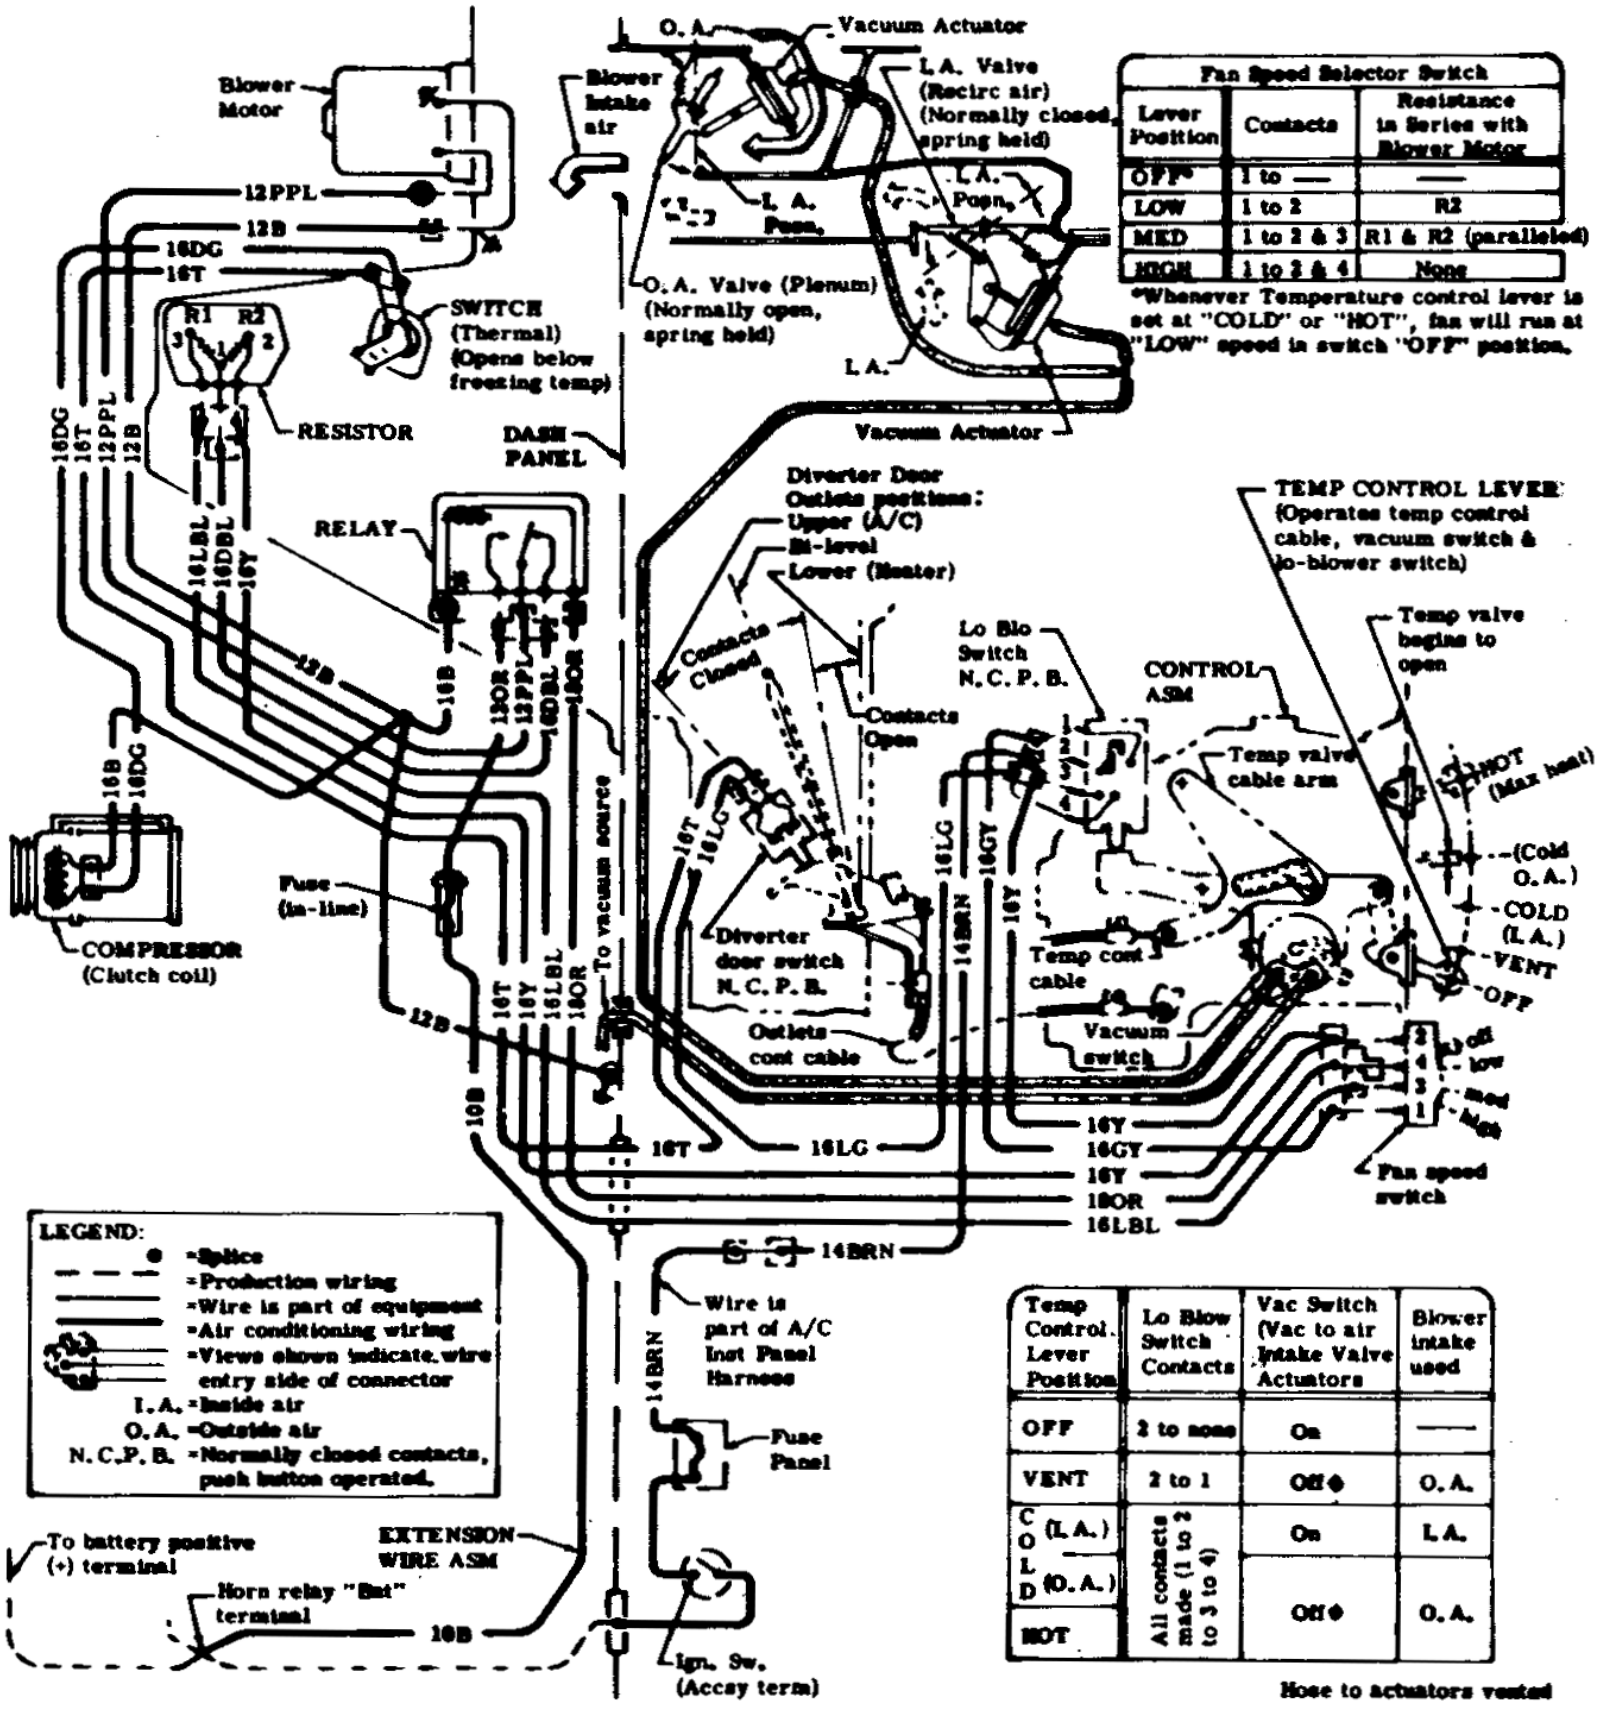

Fan Speed Selector Switch		
Lever Position	Contacts	Resistance in Series with Blower Motor
OFF*	1 to —	—
LOW	1 to 2	R2
MED	1 to 2 & 3	R1 & R2 (paralleled)
HIGH	1 to 2 & 4	None

*Whenever Temperature control lever is set at "COLD" or "HOT", fan will run at "LOW" speed in switch "OFF" position.

Temp Control Lever Position	Lo Blow Switch Contacts	Vac Switch (Vac to air Intake Valve Actuators	Blower intake used
OFF	2 to none	On	—
VENT	2 to 1	Off◆	O.A.
COLD (L.A.)	All contacts made (1 to 2 to 3 to 4)	On	L.A.
COLD (O.A.)		Off◆	O.A.
HOT			

Hose to actuators vented

1968 Chevy II & Nova

Air Conditioning & Heating